

RIIFO

STAINLESS STEEL (FN16) **HEATING/COOLING MANIFOLD OPERATING INSTRUCTIONS**

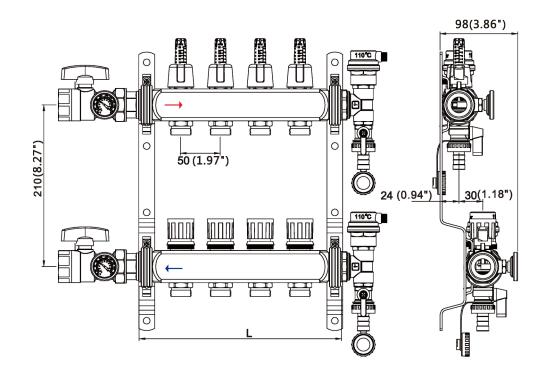

SPECIFICATIONS (mm/in)

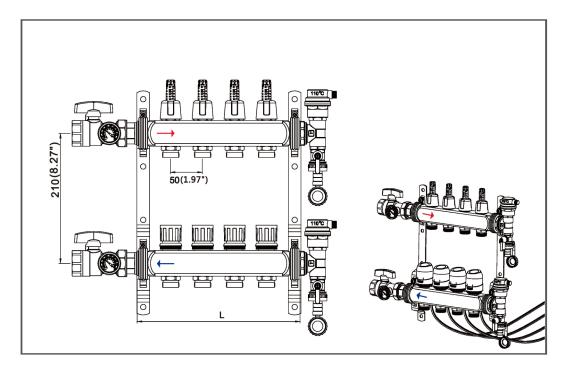



SPECIFICATION	CONNECTIONS	LOOPS	L/mm	L/in
FN16-1F-3/4*2	G1" x 3/4"	2	155	6.10
FN16-1F-3/4*3	G1" x 3/4"	3	205	8.07
FN16-1F-3/4*4	G1" x 3/4"	4	255	10.04
FN16-1F-3/4*5	G1" x 3/4"	5	305	12.01
FN16-1F-3/4*6	G1" x 3/4"	6	355	13.98
FN16-1F-3/4*7	G1" x 3/4"	7	405	15.94
FN16-1F-3/4*8	G1" x 3/4"	8	455	17.91
FN16-1F-3/4*9	G1" x 3/4"	9	505	19.88
FN16-1F-3/4*10	G1" x 3/4"	10	555	21.85
FN16-1F-3/4*11	G1" x 3/4"	11	605	23.82
FN16-1F-3/4*12	G1" x 3/4"	12	655	25.79

TECHNICAL DATA

Materials	Manifold Body	Stainless Steel	
	Port Connection	Brass	
	Seal	EPDM	
Working Performance	Permissible Maximum Continuous Working Temperature: 82C°(180F) at 6.9bar (100psi)		
Working Media	Media 1	Water	
	Media 2	Water/Ethylene Glycol 50/50%	
	Media 3	Water/Propylene Glycol 50/50%	
Flow	Indication Scale	0.13-1.3G/min	
	Indication Tolerance	±10%	
	Kvs	1.10	
Connection	Supply / Return	G1" female	
	Circuit Connection	G3/4" male	
	Flowmeter Connection	G1/2" male	


Notice: Manifold may come with manual or automatic air vents (illustrations show automatic aivents

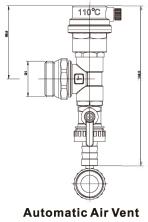

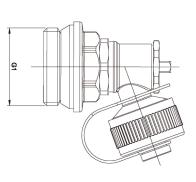


Manual Air Vent

INSTALLATION

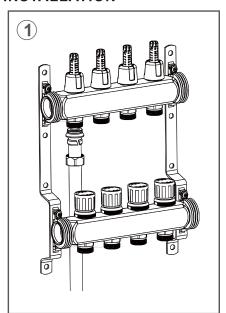


Connect tubing using appropriate fitting

Verify fitting is secure

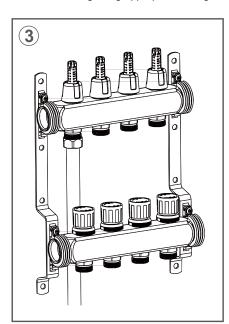


• Repeat steps 1 and 2 on each loop until complete


FLOW METER OPERATION

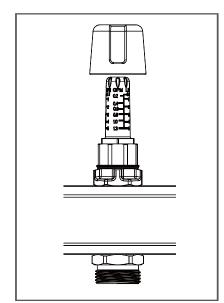


Remove the red cap

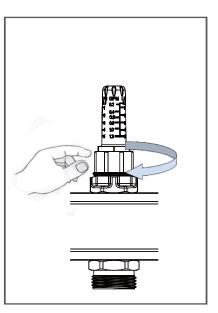

 Turn knob clockwise to decrease flow

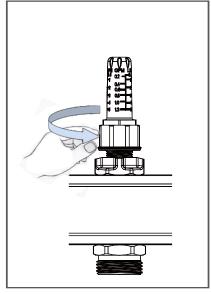

 Turn knob counter-clockwise to increase flow

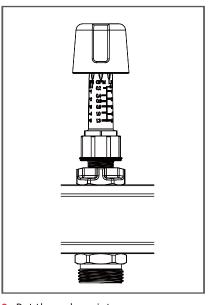


 Put the red cap into locked position

READING THE FLOWMETER

Warning:

Do not turn the top cup for flow rate adjustment.

Do not turn knob counterclockwise more than 3 rounds. This will cause the red disk to be out of indication range when the system is pressurized.

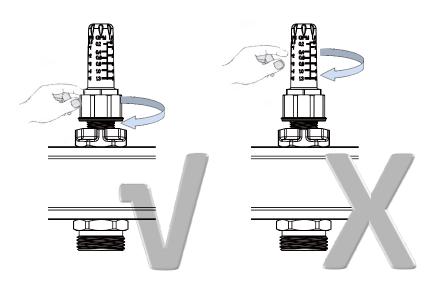

Flow can be determined by the position of the disk. In this example, the loop has a flow rate of 0.53 G/min.

